

QUALITY AND PROCESS CONTROL- THERMAL PATTERN RECOGNITION

THE CUSTOMER'S CHALLENGE


As assembly processes become more automated and operate at higher speeds, so too should quality assurance processes. The goal of quality assurance should be to find problems and then solve them quickly and efficiently to prevent bottlenecking, downtime, and/or faulty packaging or products from leaving the facility. An investment in better quality assurance can save an organization precious time and money.

THE SOLUTION

Temperature differences of 1.8°F or more are often used to determine pass/fail criteria for everything from packaging and sealing to food production, die casting, and a variety of other applications. Infrared imaging can repeatedly and accurately illustrate thermal patterns and gradients used to identify these flaws in production processes. Thermal imaging can show an incomplete shape, non-uniform temperature profile, or varying gradients. Thermal data analytics assist in finding and correcting errors in the production equipment, thereby helping to prevent the output of defective products. Infrared solutions use the same type of algorithms for edge detection, blob analysis, and pattern recognition as vision systems, so automation solutions specializing in quality assurance and control processes represent the future of infrared in industry.

THE TECHNOLOGY

FLIR offers a range of fixed-mount thermal imaging solutions to stream temperature linear data or radiometric data through communication protocols such as GigE Vision and RTSP. The infrared camera works with a variety of software to interpret images, including Cognex Designer Pro, NI Software, Pleora Ebus, Teledyne, and Spinaker SDK. Uncompromised data is repeatably and reliably generated from thermal detector arrays in either 320 × 240 or 640 × 480 options offering up to ±2°C accuracy within temperature ranges of -40°C to 2000°C. FLIR thermal cameras can be tailored to your application: select manual or automatic focus or change the lens when the field of view needs to be modified. Thanks to its unique compressed radiometric output, these cameras avoid overburdening processors. They also add value to your system by pairing a built-in visual camera and LEDs in partnership with the infrared camera.

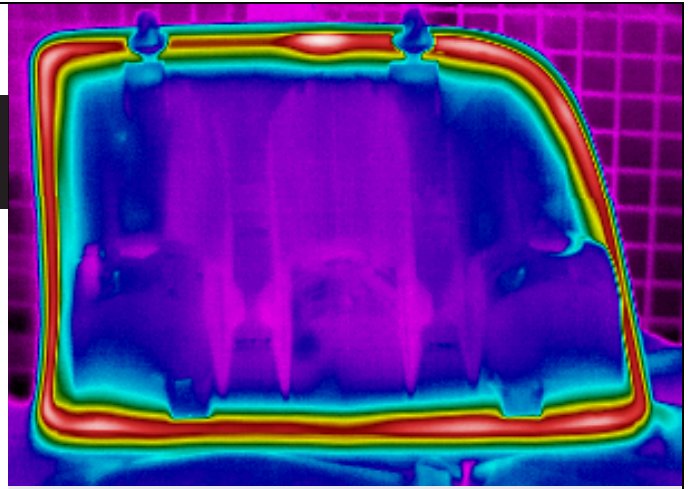

Glue Bead



FLIR A65™
IR Temperature Sensor




FLIR A615™
Thermal Machine Vision Camera




FLIR A700™
Thermal Image Streaming Camera

THERMAL IMAGING APPLICATION AREAS

- Plastic mold injection
- Welding
- Packaging
- Manufacturing
- Validation
- Paper mills
- Automotive
- Food and beverage

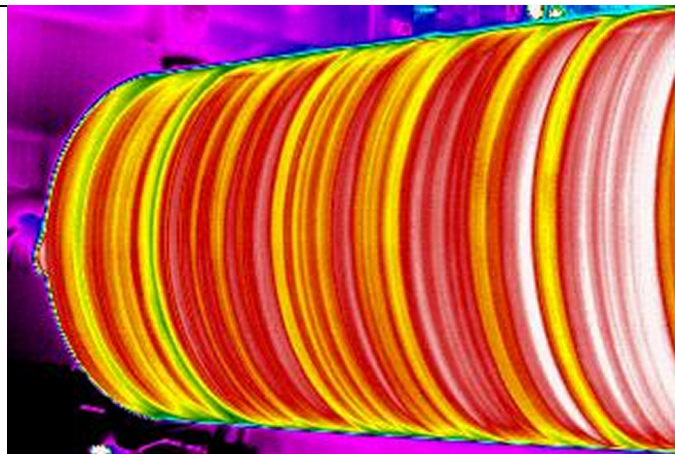

Paper Mills

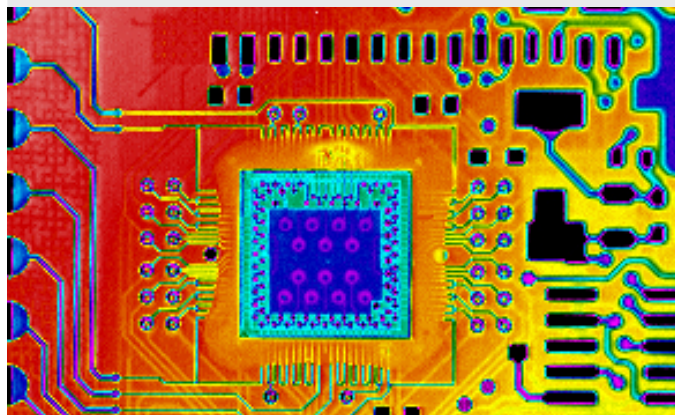

Validation

FLIR Thermal Automation:

UNITED STATES

Jake Sigmond
Automation Manager
Direct/Mobile: (720) 682-9015
Email: Jake.Sigmond@flir.com

CANADA

Rob Milner
Sales Manager, Automation & Science
Direct/Mobile: 647-290-4175
Email: rob.milner@flir.com

Learn more at www.flir.com/automation
Customer Support Site: flir.custhelp.com
Camera and Software Support: 866-477-3687
ITC Training website: www.infraredtraining.com


www.flir.com
NASDAQ: FLIR

Equipment described herein is subject to US export regulations and may require a license prior to export. Diversion contrary to US law is prohibited. ©2020 FLIR Systems, Inc. All rights reserved. 06/12/20

20-0761-INS



Automotive

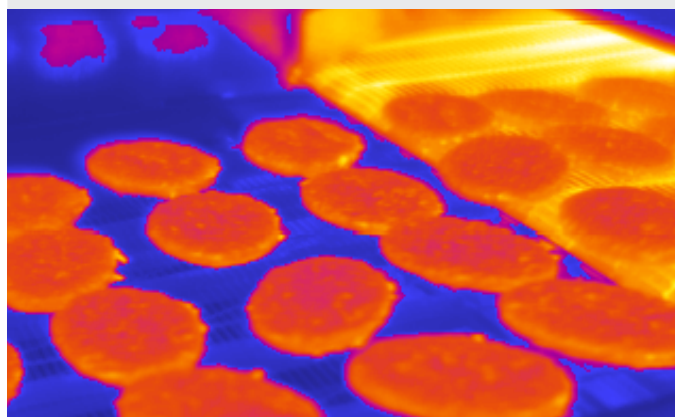

Food and Beverage

